



makes a difference

## HDS- M/S QUICKSTART

**RM**

1 2

= DIESEL

HEL/IGO

**H<sub>2</sub>O**

**ON**

?

?

**OFF**

**H<sub>2</sub>O**

